



AlFI Pinhole Installation Manuals


With Trim

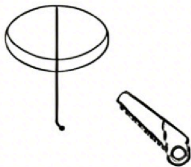


1. Cutout on the ceiling
cutout size: **D75mm**

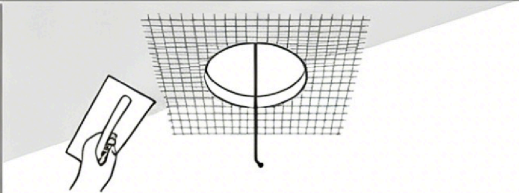


2. Plaste-mesh-putty-paint, finish the ceiling

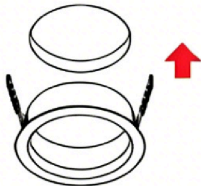

3. After the paint dry enough,
install the embedded part

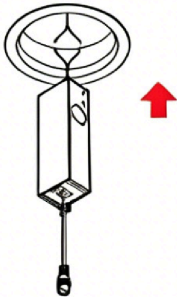

4. Wire the driver

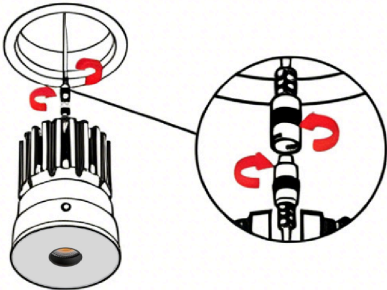

5. Plug in the light



6. Click the light on



7. Done



- To secure safety, a qualified electrician is required to install/remove the luminaire.
- **POWER OFF!!! NOT HOT PLUGGING!!!**