


AICO Semi-recessed Twins Installation Manuals

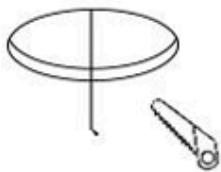


1. Cutout on the ceiling
cutout size: 75mm (2.95")



2. Plaste-mesh-putty-paint,
finish the ceiling



3. After the paint dry enough,
install the frame

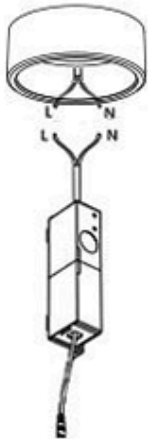

4. Wire the driver





5. Plug in the light




6. Fix the light on by magnet



7. Done

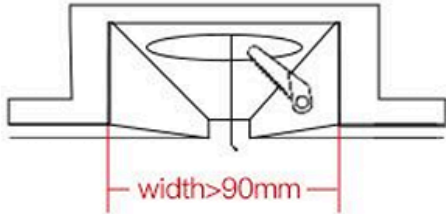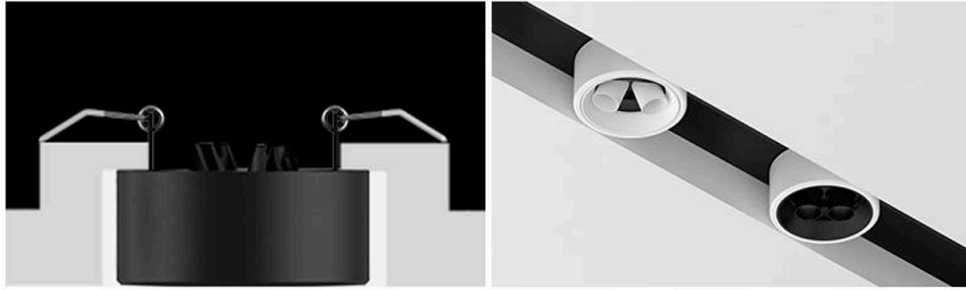


1. Build a channel
(width > 90mm) on the ceiling,
cutout on the ceiling
cutout size: 75mm (2.95")

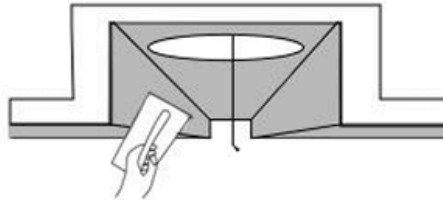


2. Plaste-mesh-putty-paint,
finish the ceiling




3. After the paint dry
enough, install the frame

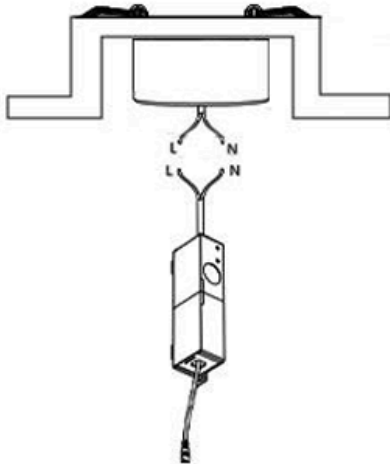

4. Wire the driver

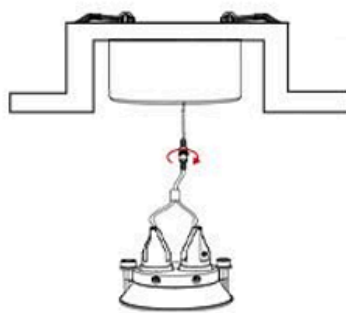

5. Plug in the light

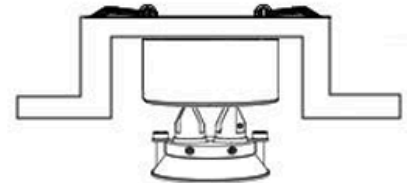

6. Fix the light on by magnet



7. Done



- To secure safety, a qualified electrician is required to install/remove the luminaire.
- POWER OFF!!! NOT HOT PLUGGING!!!