



AlFI Pinhole Installation Manuals


Trimless

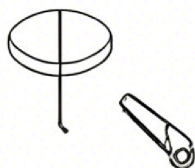


1. Cutout on the ceiling
cutout size: **D75mm**

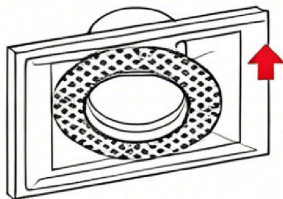


2. Install the embedded
part

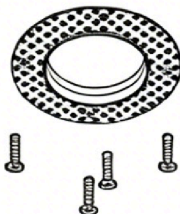


3. Fix embedded parts
with screws

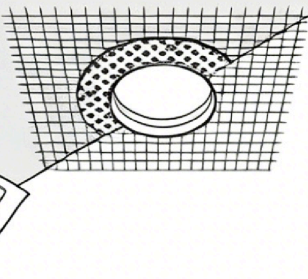

4. Plaster-mesh-putty-
paint

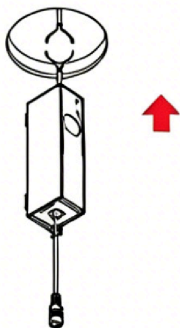


5. Wire the driver

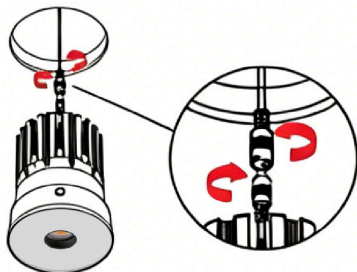

6. Plug in the light



7. Click the light on



8. Done



- To secure safety, a qualified electrician is required to install/remove the luminaire.
- **POWER OFF!!! NOT HOT PLUGGING!!!**