

AICO Round Pinhole Installation Manuals

Trimless




1. Cutout on the ceiling
cutout size: **D55mm**(2.17")



2. Wire the driver




3. Plug in the light




4. Install the lamp,
and fixed with screws



5. Install the masking plug

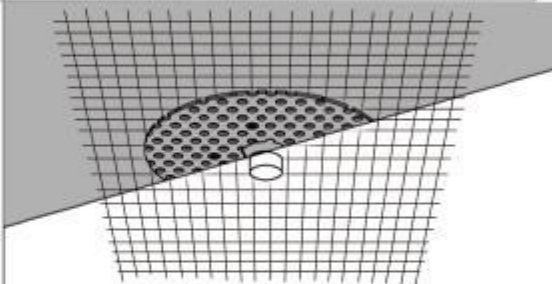

6. Plaster-mesh-putty-paint



7. After the paint dry enough,
remove the masking plug
from the aperture.



8. Done



- To secure safety, a qualified electrician is required to install/remove the luminaire.
- **POWER OFF!!! NOT HOT PLUGGING!!!**