



AICO Round Snout Installation Manuals


Trimless

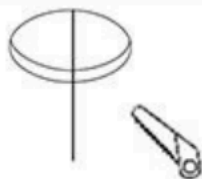


1. Cutout on the ceiling
cutout size: **D75mm** (**2.95"**)

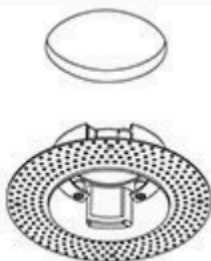


2. Install the embedded part

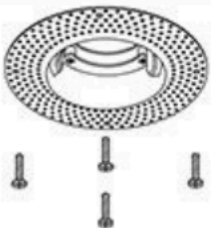

3. Fix embedded parts
with screws

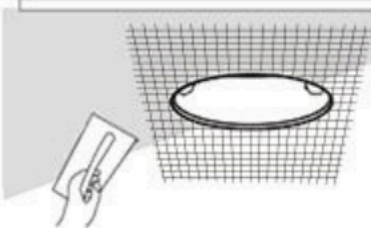

4. Plaster-mesh-putty-
paint

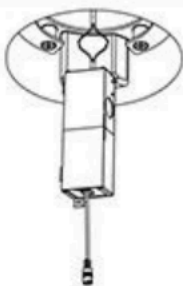

5. Wire the driver



6. Plug in the light, and
buckle the safety rope



7. Fix the light on by magnet



8. Done



- To secure safety, a qualified electrician is required to install/remove the luminaire.
- **POWER OFF!!! NOT HOT PLUGGING!!!**