
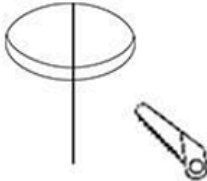
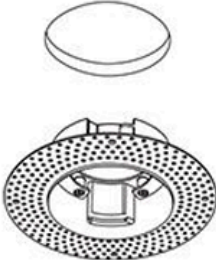
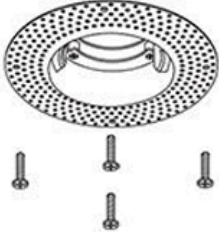
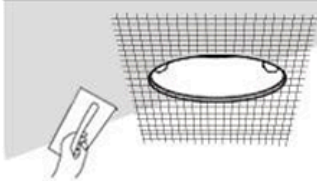
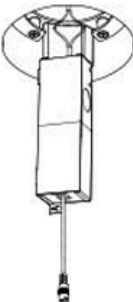


AICO Stretchable L Installation Manuals

Trimless

 1.Cutout on the ceiling cutout size: D75mm (2.95")	 2. Install the embedded part	 3. Fix embedded parts with screws
 4. Plaster-mesh-putty- paint	 5. Wire the driver	 6. plug in the light, and buckle the safety rope
 7. fix the light on by magnet	 8. done	

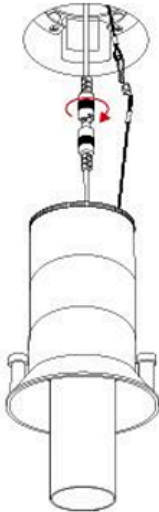

- To secure safety, a qualified electrician is required to install/remove the luminaire.
- POWER OFF!!! NOT HOT PLUGGING!!!