
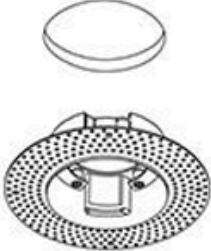
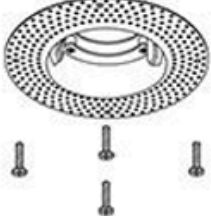
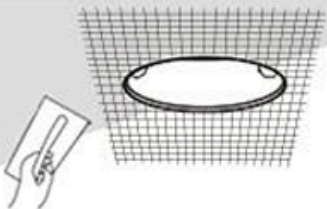


AICO Stretchable Installation Manuals

Trimless

		
1. Cutout on the ceiling cutout size: D75mm (2.95")	2. Install the embedded part	3. Fix embedded parts with screws
		
4. Plaster-mesh-putty-paint	5. Wire the driver	6. Plug in the light, and buckle the safety rope
		
7. Fix the light on by magnet	8. Done	

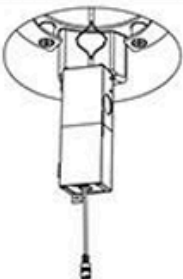

- To secure safety, a qualified electrician is required to install/remove the luminaire.
- POWER OFF!!! NOT HOT PLUGGING!!!