



Sergio Concave Installation Manuals




1. Cutout on the ceiling
cutout size: **L123*W123mm**
(L4.84"*W4.84")

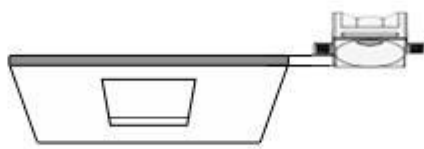


2. Adjust the embedded
part height, flush with the
gypsum ceiling/drywall

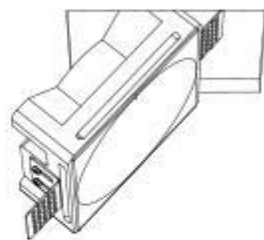

3. Install the embedded
part

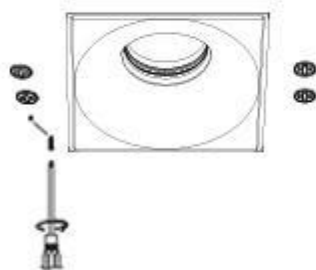


4. Fix it with screws

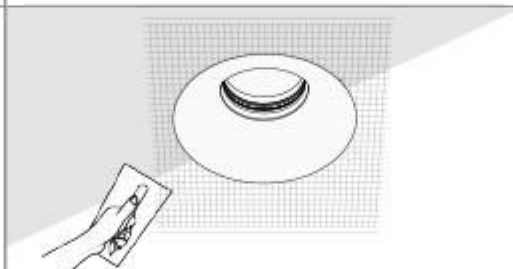


5. Plaster-mesh-putty-
paint



6. Wire the driver

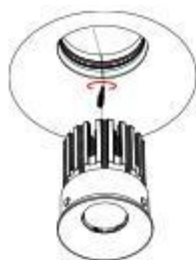

7. Plug in the light

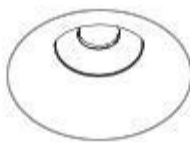

8. Click the light on



9. Done

Note:

1. The embedded part should be placed 1–3mm lower than the gypsum ceiling/drywall.
2. Clean the hole edges while the paint is still wet, for better fitting of the light module.



- To secure safety, a qualified electrician is required to install/remove the luminaire.
- **POWER OFF!!! NOT HOT PLUGGING!!!**